 
 
 
 
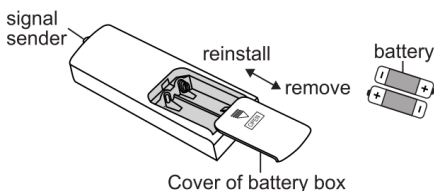 


RAC

YB1FA(MOTO)

- This controller suitable for:
U-Match Standard Cassette, Floor Ceiling

No.	Name	Fuction
1	Signal transmitter	Signal transmitter
2	ON/OFF button	Press this button, and the unit will be turned on;press it once more, and the unit will be turned off. When turning off the unit, the Sleep function will be canceled, but the presetting time is still remained.
3	MODE button	By pressing this button, Auto, Cool, Dry, Fan, Heat mode can be selected circularly. Auto mode is default after power on. Under the Auto mode, the setting temperature will not be displayed; Under the Heat mode, the initial value is 28°C (82°F);Under other modes, the initial value is 25°C(77°F).  △ AUTO; ❄️ COOL; ☀️ DRY; 🌀 FAN; 🔥 HEAT (only for cooling and heating unit)
4	- button	Preset temperature can be decreased by pressing this button. Pressing and holding this button for more than 2 seconds can make the temperature changed quickly until release this button and then transmit this order.
	+ button	Preset temperature can be increased by pressing this button. Pressing and holding this button for more than 2 seconds can make the temperature changed quickly until release the button and then transmit this order.
5	FAN button	By pressing this button, Auto, Low, Middle, High speed can be circularly selected. After power on, Auto fan speed is default.  Low speed Middle speed High speed Note: Under the DRY mode, the fan will be kept running at the low speed and the fan speed isn't adjustable.
6	SWING UP/DOWN button	Press this button to set up the swing angle, which circularly changes as below: 
7	CLOCK button	By pressing this button, the clock is allowed to be set, with ⌚ blinking, and then press the +/- button to adjust the clock within 5 seconds.
8	TIMER ON button	When TIMER ON is activated, ON will blink while the symbol ⌚ will disappear. Within 5 seconds it is allowed to set the ON time by pressing the +/- button.
9	X-FAN button	Pressing this button can activate or deactivate the X-FAN function. In Cool or Dry mode, by pressing this button, if ❄️ is displayed, it indicates the X-FAN function is activated. By repressing this button, if ❄️ disappears, it indicates the X-FAN function is deactivated.
10	TEMP button	By pressing this button it is allowed to select displaying the indoor setting temperature or the indoor ambient temperature.
11	TIMER OFF button	By pressing this button it is available to go to the TIMER OFF setting state with the same setting method as that of the TIMER ON, in which case the OFF symbol blinks.
12	TURBO button	In the Cool or Heat mode, pressing this button can activate or deactivate the TURBO function
13	SLEEP button	By pressing this button, Sleep On and Sleep Off can be selected. After powered on, Sleep Off is defaulted. Once the unit is turned off, the Sleep function is canceled.
14	LIGHT button	Press this button to select LIGHT on or off in the displayer. When the LIGHT is set to on, the icon 🌞 will be displayed and the indicating light in the displayer will be on.

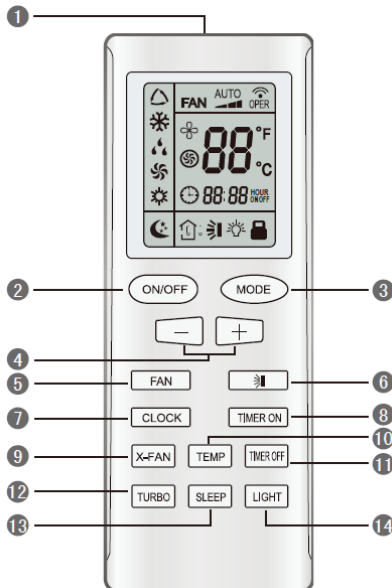

- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

Job Name:

Schedule Reference:

Date: